

•	Chapter 5:
•	报警监控 Alarm

5



监视画面



定值设定



程式设定



曲线监控



运转设定



预约设定



档案管理



报警监控



Chapter 5 报警监控 | Alarm

← 目录

DI报警

15:29:36

画面选择

● DI报警

● 历史报警

报警解除

序号	名称	序号	名称
0		10	
1		11	
2		12	
3		13	
4		14	
5		15	
6		16	
7		17	
AL1		AL3	
AL2		AL4	

← Directory

Alarm list

15:19:20

Picture

● Alarm list

● Historical


Remove

NO.	Alarm name	NO.	Alarm name
0	Phase Sequence	10	Fan Switch
1	Lack Of Water	11	
2	Air Over Temp	12	Fan Overload
3	TestRoom Over Temp	13	
4	Gas Pipe Over Temp	14	
5	Humidity Over Temp	15	
6	Emergency Stop	16	
7	CompressorOverTemp	17	
AL1	Upper Temp Limit	AL3	
AL2		AL4	

CONTROL



← 目录		历史报警		08:35:05
画面选择	发生时间	解除时间	信息	
● DI报警 ①	2017-08-14 08:18:28	2017-08-14 08:18:29	定值启动	
	2017-08-11 15:56:01	2017-08-11 15:56:02	定值停止	
● 历史报警 ②	2017-08-11 15:50:53	2017-08-11 15:50:54	定值停止	
	2017-08-11 15:48:46	2017-08-11 15:48:53	定值启动	
	2017-08-11 15:48:45	2017-08-11 15:48:46	定值启动	
	2017-08-11 15:48:43	2017-08-11 15:48:44	定值停止	
	2017-08-11 15:48:39	2017-08-11 15:48:41	定值启动	
	2017-08-11 10:44:12	2017-08-11 10:44:13	定值停止	
	2017-08-11 10:43:59	2017-08-11 10:43:59	定值启动	
删除全部报警记录 ③				
删除启动 ④				

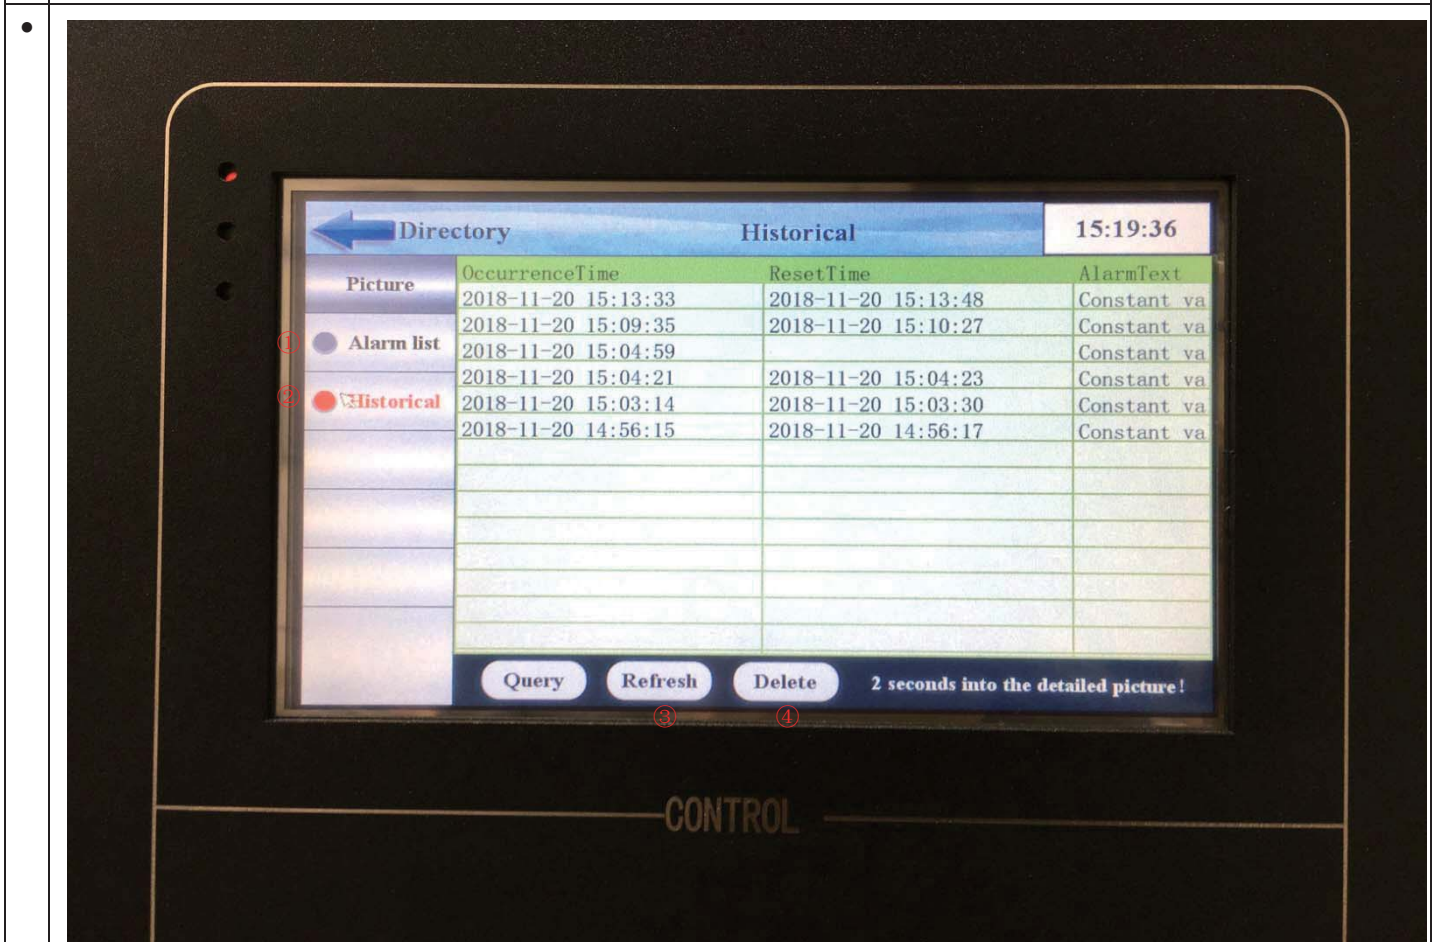

#	名称 Name	说明 Description
①	DI 报警 Alarm list	外部输入的故障报警显示 Externally entered fault alarm display
②	历史报警 Historical	报警的历史数据 Historical data of the alarm
③	报警解除 Refresh	手动解除报警信号 Manually cancel the alarm signal
④	删除启动 Delete	操作员删除报警历史 Operator deletes alarm history